

START HERE


STEP 1: GET A LAUNDRY CARD

If you already have a card, go to **Step 2**.

The laundry card is used to start washers and dryers. The card is reusable and reloadable. No coins needed.


Touch the “**Touch here to get New Card**” on the kiosk. Then insert bills or select Credit/Debit.

The Value Add Center kiosk does not provide change. Your payment amount will be added to the balance on the laundry card.

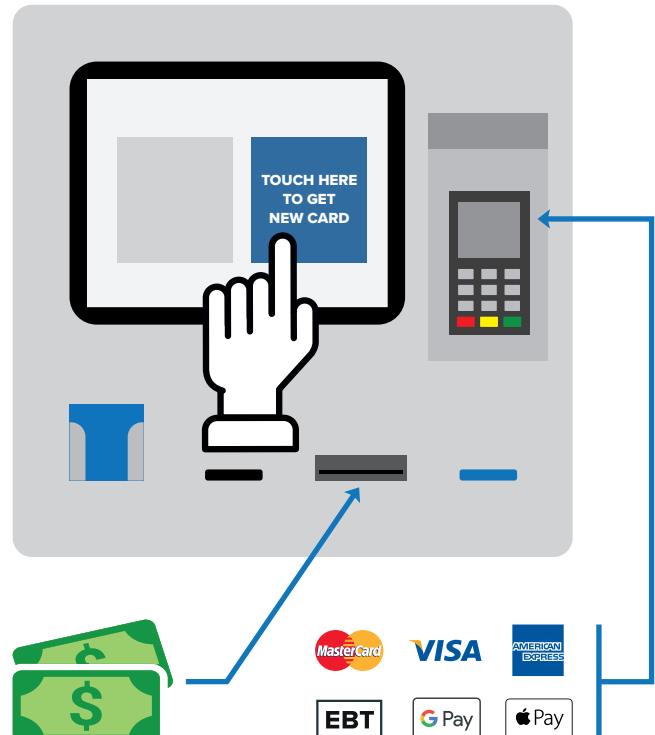

STEP 2: ADD MORE MONEY (IF NEEDED)

Simply place your card into the card holder and make payment with cash or credit/debit cards.

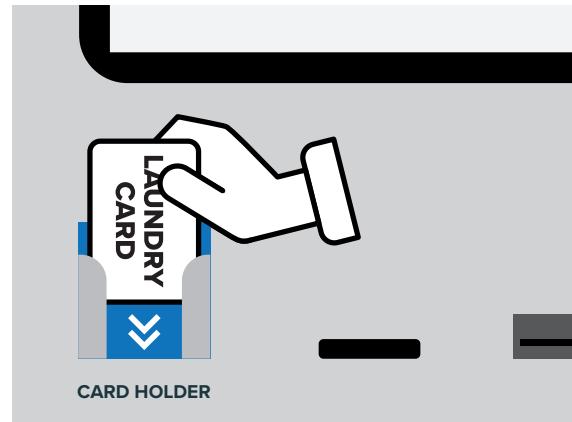

STEP 3: START WASHER OR DRYER

Place your card onto the card reader.

You may need to press the **Start** button on the machine.

